EUROPALMS®
LIKE NATURE



EN ANIMATED WITCH CAULDRON 145 cm

Setup and Operation

No. 83316187

Parts




9 x Stick (A)



Top Part (B)



Cauldron (C)

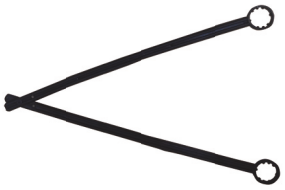

3 x Base Support (D)

Setup

Please follow the steps shown here to set up the prop correctly.

1




The completed assembly for this step.



Connect three sticks **(Part A)** and attach them to the top part **(Part B)** to form a supporting leg. Repeat the process to assemble the other two supporting legs, as shown in the image.


2

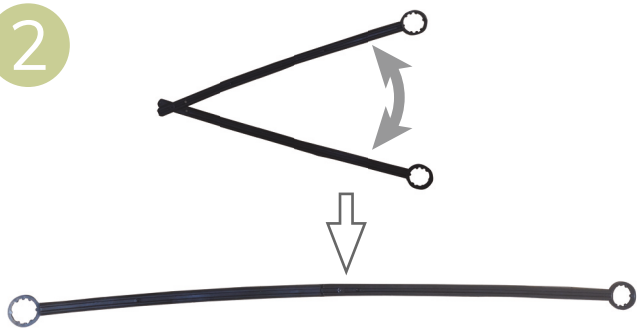

Unfold the three base supports **(Part D)** by extending them outward to form a straight line, as shown in the image.

3

The completed assembly for this step.

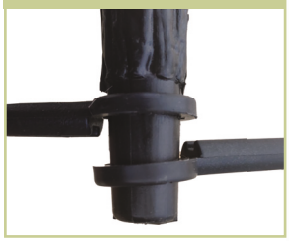

Prepare two base supports **(Part D)** by aligning the two holes so they overlap, and insert one of the supporting legs **(Part A)** through the holes, as shown in the image.

4



Assemble the remaining two base supports **(Part D)** in the same way as shown in Step 3.

5




Hang the cauldron **(Part C)** on the hook at the top of the stand **(Part B)**, as shown in the image.

6



Done!

Battery box

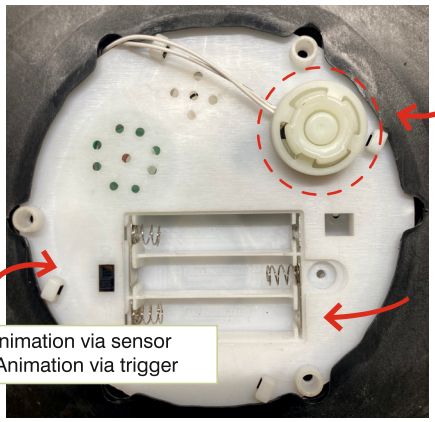

Operation

INTRODUCTION

Welcome to Europalms! Your new scary prop uses sound and lighting effects to give spooky surprises! You can set off the animation via a trigger button or the built-in microphone for approx. 30 seconds. The prop is powered by 3 AAA batteries. Your Europalms team wishes you much enjoyment with your new animated prop. Please read these instructions carefully before using the product. They contain important information for the correct use of your product. Please keep them for future reference.

USE


The prop is powered by 1.5V AAA batteries. The battery box is integrated in the body together with the electronics unit. The electronics consist of a microphone and speaker as well as the mode switch on the battery box. In addition, a cable for the trigger button and a cable for the switch pad (accessory) are attached.

MODES OF OPERATION

Mode switch ON: The animation is triggered when the built-in microphone detects sounds. An eerie sound will now be heard for a short time and LEDs will flash.

Mode switch OFF: The animation can be started once with the trigger button or the switch pad.



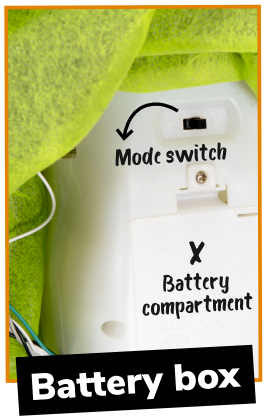

Note: The images shown here are for illustrative purposes only. The battery box on your prop may vary.

TIP

SWITCH PAD



As a special solution to trigger the animation, the "**Step Here**" switch pad is optionally available from your dealer. To use the pad, connect it to the plug connection on the trigger button. The switch pad can be easily hidden under a carpet rug, doormat or decorative fabric. One step on the pad starts the animation and spooky fun is guaranteed!

SAFETY WARNINGS

- Intended use: The product is intended for indoor decoration. Protect the product against high air humidity, water or heat sources. The recommended temperature range is -5 to +45 °C. For safe and proper use of the device, it is essential to follow all information and instructions in this operating manual. Any other use, as well as use under other operating conditions, is considered improper and may result in personal injury or property damage. No liability is accepted for damage resulting from improper use. The device may only be used by persons who have sufficient physical, sensory and mental abilities, as well as the relevant knowledge and experience. Other persons may only use the device if they are supervised or instructed by a person responsible for their safety.
- Unauthorized rebuilds or modifications of the product are not permitted for reasons of safety and render the warranty invalid.
- This product is not a toy. Keep it out of the reach of children and pets. Do not leave packaging material lying around carelessly.
- During the animation sequence, some props move independently. Ensure a safe stand or a suitable attachment to avoid material damage.
- The product must not be operated in its packaging. Defective LEDs cannot be replaced.
- The product and the cable insulation must not be damaged or mechanically stressed. The battery box and the outer flexible cable cannot be replaced.
- Batteries can leak. As a precaution, you should therefore remove the batteries if the device is not going to be used for a long period of time.
- Only use battery types recommended in the user manual.
- Do not mix old and new batteries.
- Do not mix alkaline, rechargeable, standard or different types of batteries.
- The supply terminals are not to be short-circuited.
- This product is maintenance-free, except for occasional battery replacement. Do not try to repair the device by yourself as this may result in damage.
- Caution, LED light: Do not look directly at the light source for long periods.

If the unit is to be put out of operation definitively, take it to a local recycling plant for a disposal which is not harmful to the environment. Do not dispose of as municipal waste. Contact your retailer or local authorities for more information.

Never dispose of discharged batteries or defective rechargeable batteries in the household waste. Please take them to a special waste disposal or a collection container at your retailer.

TECHNICAL SPECIFICATIONS

Battery:	3 x 1.5V battery, type AAA (not included)
Effect:	Sound and light via trigger button or acoustic sensor
Animation:	approx. 30 sec
Dimensions (LxWxH):	85 x 85 x 145 cm
Weight:	2.15 kg

Subject to change.

CE

Europalms is a brand of Steinigke Showtechnic GmbH • Andreas-Bauer-Str. 5 • 97297 Waldbüttelbrunn, Germany • www.steinigke.de/support • info@steinigke.de Publ. 03/2026