EUROPALMS®
LIKE NATURE

EN SPOOKY PROP w/ ANIMATION

Setup and Operation

No. 83316182 | Eye Flower, 120-200 cm

Parts











Setup

Please follow the steps shown here to set up the prop correctly.




Rotation Direction

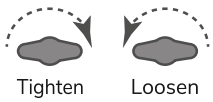

Tighten Loosen

Step 1

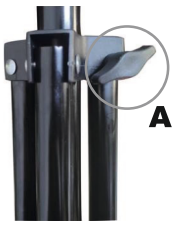


Loosen the knob at position A.

Step 2



Pull out the support legs marked with circles.

Step 3

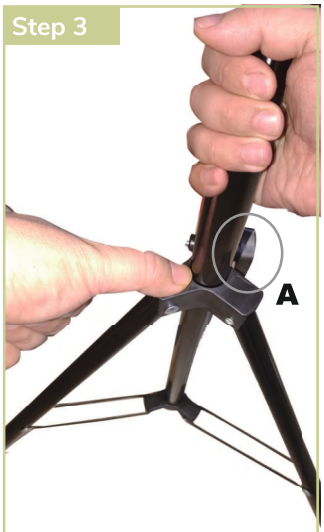

Hold the middle rod with one hand. Press down on the marked spot with your other hand's thumb until the support legs open to the proper angle. Then tighten knob A.

Step 4



Loosen both knobs B and C. Pull out the 2nd and 3rd tubes to adjust the height. When you are happy with the position, tighten knobs B and C again.

Step 5



Done!

1




2



Cable connections


3

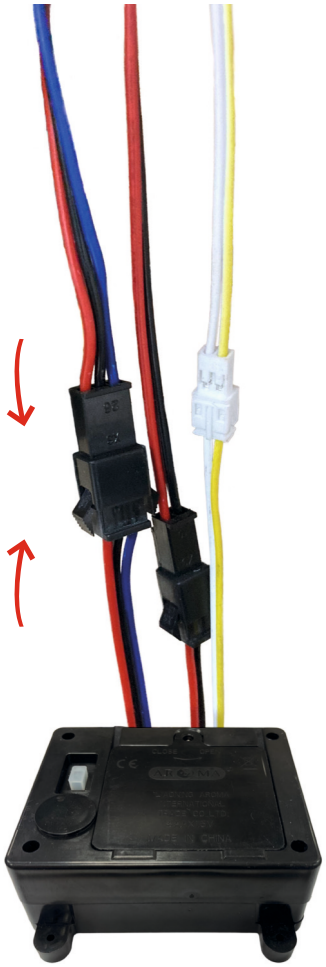

The cable pairs are color-coded to ensure that the connections are correctly matched by color.


Battery box

4

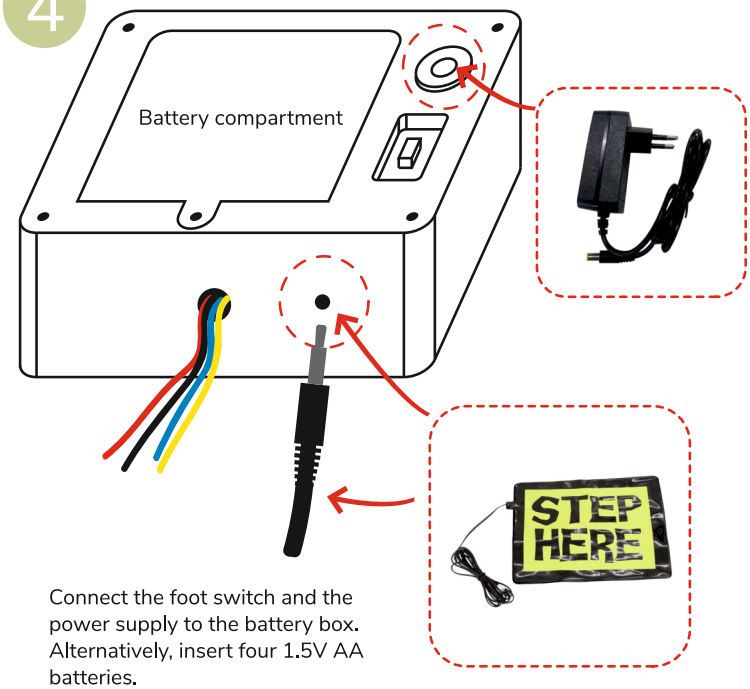

Connect the foot switch and the power supply to the battery box. Alternatively, insert four 1.5V AA batteries.

Operating mode

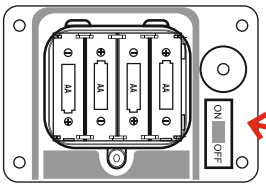

ON = Animation via sensor
OFF = Animation via foot switch

Operation

INTRODUCTION

Welcome to Europalms! Your new scary prop gives spooky surprises with its sound, light and motion features! The prop can be operated with batteries or the included power adapter. Your Europalms team wishes you much enjoyment with your new animated prop. Please read these instructions carefully before using the product. They contain important information for the correct use of your product. Please keep them for future reference.

POWER SUPPLY

Connect the included power adapter to the power jack on the battery box and plug it into an outlet. The battery box is integrated into the body along with the electronics unit. Depending on the model, the electronics may consist of a microphone, speaker, motor and the mode switch on the battery box. You do not need to remove the batteries to use the power adapter. There is no charging function for the battery box. Turn off the prop after use and unplug the power cord to avoid unnecessary power consumption.

BATTERY OPERATION

Turn off the device and remove the battery cover. Insert suitable batteries with the correct polarity. Replace the cover. Batteries can leak. As a precaution, you should therefore remove the batteries if the device is not going to be used for a long period of time. Also, do not forget to turn off the prop after use. Otherwise, the batteries may be depleted by the next time you use it.

MODES OF OPERATION

Mode switch ON: The animation is triggered when the built-in microphone detects sounds or the motion sensor detects a change. Depending on the model, an eerie sound will now be heard for a short time, LEDs will flash and the prop will move.

Mode switch OFF: The animation can be started once with the the foot switch. The foot switch can be easily hidden under a carpet rug, doormat or decorative fabric.

TECHNICAL SPECIFICATIONS

Power supply:	6 V DC via power adapter (included) or
	4 x 1.5V battery, type AA (not included)
Effect:	Light, sound and movement via motion
	sensor, acoustic sensor or foot switch
Animation:	approx. 55 sec
Dimensions (WxDxH):	90 x 55 x 200 cm
Weight:	1.75 kg

Subject to change.

SAFETY WARNINGS

- Intended use: The product is intended for indoor decoration. Protect the product against high air humidity, water or heat sources. The recommended temperature range is -5 to +45 °C. For safe and proper use of the device, it is essential to follow all information and instructions in this operating manual. Any other use, as well as use under other operating conditions, is considered improper and may result in personal injury or property damage. No liability is accepted for damage resulting from improper use. The device may only be used by persons who have sufficient physical, sensory and mental abilities, as well as the relevant knowledge and experience. Other persons may only use the device if they are supervised or instructed by a person responsible for their safety.
- Unauthorized rebuilds or modifications of the product are not permitted for reasons of safety and render the warranty invalid.
- This product is not a toy. Keep it out of the reach of children and pets. Do not leave packaging material lying around carelessly.
- The power adapter uses dangerous mains voltage. Inexpert handling may result in electric shock.
- To reduce the risk of electric shock, do not open any part of the product. Only connect the product to a proper wall socket that complies with the product specification voltage. The mains outlet must be easily accessible so that you can unplug the device quickly if need be. Run the mains cable in such a way that it cannot be tripped over.
- Do not touch the power cord and connectors with wet hands as it may cause electric shock.
- Cleaning of the product is limited to the surface. Make sure that moisture does not come into contact with any areas of the terminal connections or mains voltage control parts. Only wipe off the product with a dry, lint-free cloth. Before cleaning, disconnect the product from the mains.
- Handle the product with care; it can be damaged by impacts, blows or accidental falls, even from a low height.
- During the animation sequence, the prop moves independently. Ensure a safe stand or a suitable attachment to avoid material damage.
- This product is maintenance-free, except for occasional battery replacement. Do not try to repair the device by yourself as this may result in damage.
- The product must not be operated in its packaging. Defective LEDs cannot be replaced.
- The product and the cable insulation must not be damaged or mechanically stressed. The battery box and the outer flexible cable cannot be replaced.
- Caution, LED light: Do not look directly at the light source for long periods.
- Never short-circuit batteries, throw them into fire, or attempt to recharge them (risk of explosion!). Remove batteries if they are not going to be used for a long period of time. Leaked batteries can cause skin burns if touched. In such cases, wear gloves for protection.



If the unit is to be put out of operation definitively, take it to a local recycling plant for a disposal which is not harmful to the environment. Do not dispose of as municipal waste. Contact your retailer or local authorities for more information.



Never dispose of discharged batteries or defective rechargeable batteries in the household waste. Please take them to a special waste disposal or a collection container at your retailer.

CE

Europalms is a brand of Steinigke Showtechnic GmbH • Andreas-Bauer-Str. 5 • 97297 Waldbüttelbrunn, Germany • www.steinigke.de/support • info@steinigke.de Publ. 03/2026